 


LINK/2500 CARTRIDGE

LINK/2500

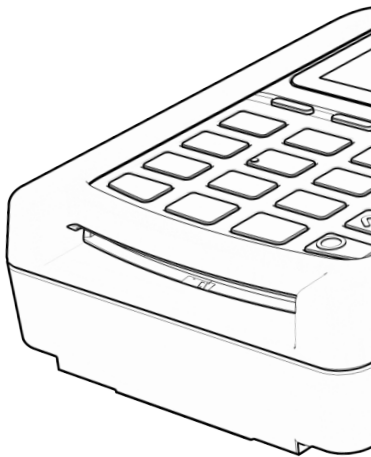

Rev A



CNX2-L25

CONTENTS

What's Included	1
Assembly	3
Disassembly	13

 
WHAT'S INCLUDED

D:1



Cartridge Screw
4-40 x 1/2" (2)

D:2



Cartridge Bottom
(1)

D:3

 


Cartridge Top
(1)

ASSEMBLY

1


Remove the Screws (D:1) from the Cartridge Bottom (D:2).

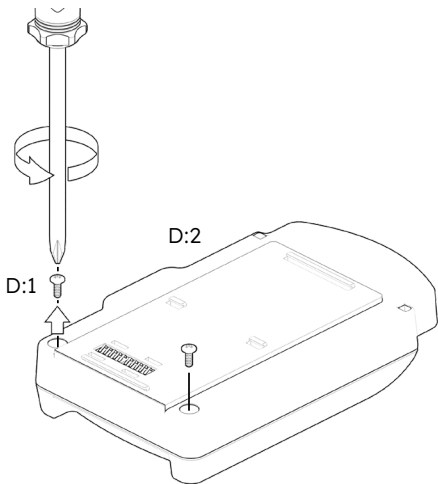

ASSEMBLY

2

 Open the Reader Cartridge.
Plug the USB-C cable into the
Link/2500.

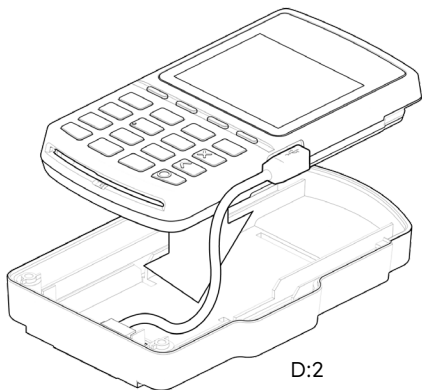


D:2

3

Place the Link/2500 in the Cartridge Bottom. Put the Cartridge Top (D:3) back on.

 
D:3

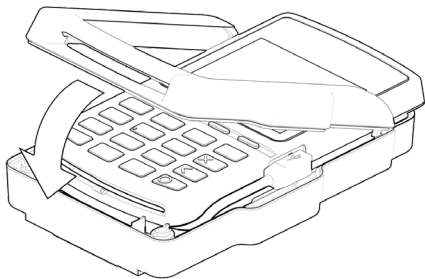

ASSEMBLY


4

 Tighten the Screws (D:1) into the Cartridge Bottom (D:2).

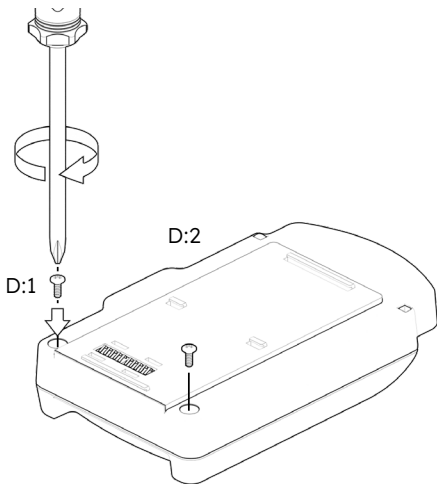

5

 
Push on the back of the NOCC plate (E) while lifting the front to remove it from the Sled (B).

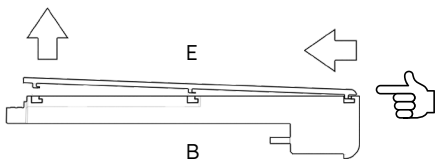

ASSEMBLY


6

 Place the feet of the Cartridge Bottom (D:2) straight down into the slots on the Sled (B) top.

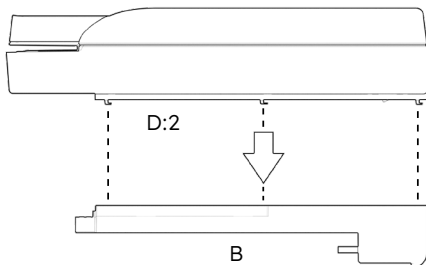

7

 Push on the front of the Reader Cartridge until you feel a click.

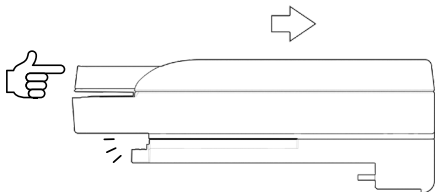

Attention

To continue the assembly process,
please refer to the Get Started
instruction booklet.

Attention

DISASSEMBLY

Attention

 
Please refer to the Get Started instruction booklet to begin disassembly.

Attention

DISASSEMBLY


1

Push on the back of the Reader Cartridge until you feel a click.

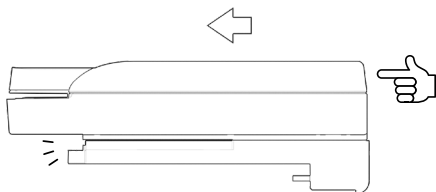

2

 
Pull the Reader Cartridge straight up to release.

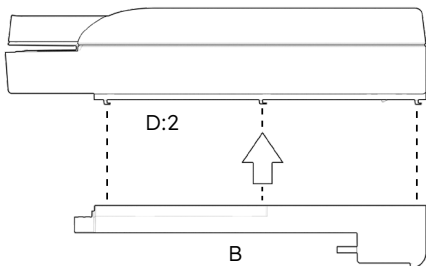

DISASSEMBLY


3

 Remove the Screws (D:1) from the Cartridge Bottom (D:2).

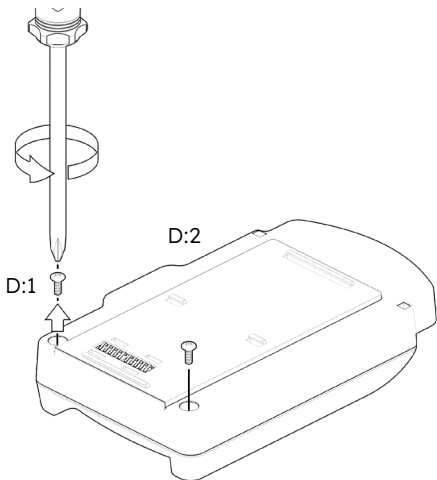

4

 Open the Reader Cartridge, unplug the Moby/5500, and remove the card reader.

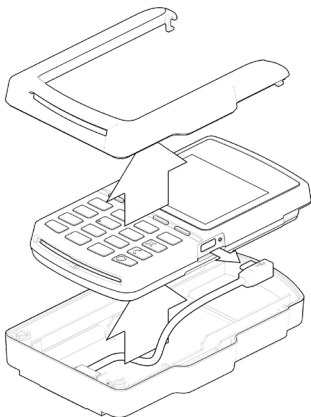

Disassembly Complete

