

LIGHT CODES

Turn Sled On	17
Turn Sled Off	18
Battery Check	19
Charging Status	20
Charging Mode: Accessory Only	21
Charging Mode: Device + Accessory . .	22
Charging Mode: Forced Accessory . . .	23

Key

 
 On

 Off

 Action

TURN SLED ON

 
- Two Second Button Hold -

1.  Ascending
Glow
2.  Flash 3x

TURN SLED OFF

- Two Second Button Hold -

1.  Flash 3x

2.  Descending
Shut Off

BATTERY CHECK

- Single Button Press -

0-25%



 
Long
Pulse

26-50%



 
Ascending
Glow

51-75%



Ascending
Glow

76-100%



Ascending
Glow

CHARGING STATUS

- Attach to Power -

0-25%



 
Single
Flashing

26-50%



 
Single
Flashing

51-75%



Single
Flashing

76-100%



Single
Flashing

 
Full



Constant

 
CHARGING MODE: ACCESSORY ONLY

- Double Press Button -

- | | | |
|----|---|----------------------|
| 1. |  | All Glow |
| 2. |  | Left Two
Flash 3x |
| 3. |  | Right Two
Stay On |

CHARGING MODE: DEVICE + ACCESSORY

- Double Press Button -

- | | | |
|----|---|----------------------|
| 1. |  | Right Two
Glow |
| 2. |  | Left Two
Flash 3x |
| 3. |  | All Four
Stay On |

CHARGING MODE: FORCED ACCESSORY

- Under 10% Battery -



Right Two Flash
Every 3 Seconds