



GET STARTED

Assembly Instructions & User Guide

UNIVERSAL STAND

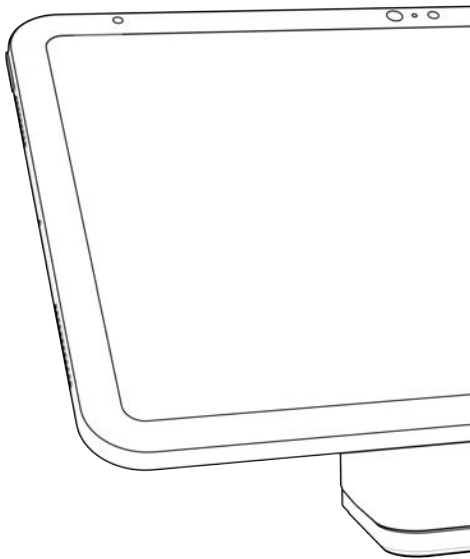

Rev A

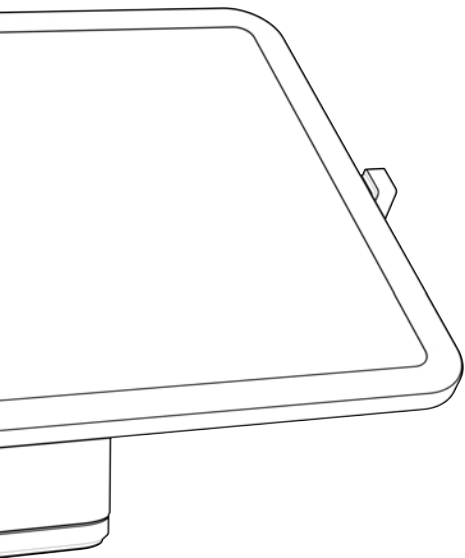

LS-UNV

CONTENTS

What's Included	1
Assembly	3
Warnings	15
Compliance	16

COMPATIBILITY

Universal Stand is compatible with all tablets which possess a sufficient flat area on the center of the rear panel.

WHATS INCLUDED

A




Universal Stand
(1)

B



Locking Screw
(1)

C

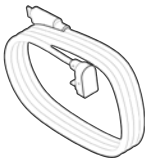


180° USB-C Cable
(1)

D



Wood Screws
(2)

E

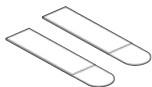

Removable Tablet
Adhesive
(2)

F



Tablet Connector
Plate
(1)

G




Locking Pin
(1)


ASSEMBLY

1

If 180° rotation of the stand is desired, turn the base to the final desired cable exit side (left or right).

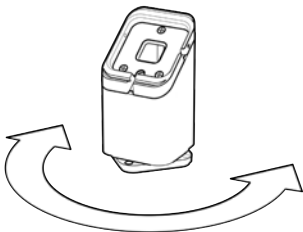

Left

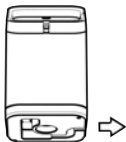


Right

ASSEMBLY


2

If rotation is not desired, turn the base so the cable is routed to the right. Lock rotation by screwing in the Locking Screw.

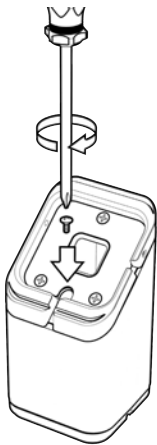

3


Feed the cable down through the stand, making sure the 180 degree connector remains at the top.

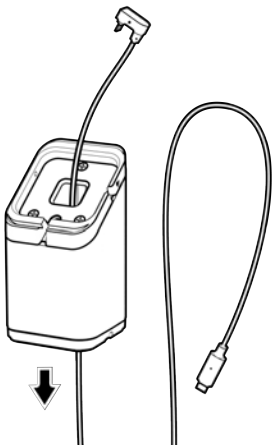

ASSEMBLY


4

Check that the cable length at the top is just enough to reach the tablet port without too much excess once mounted.

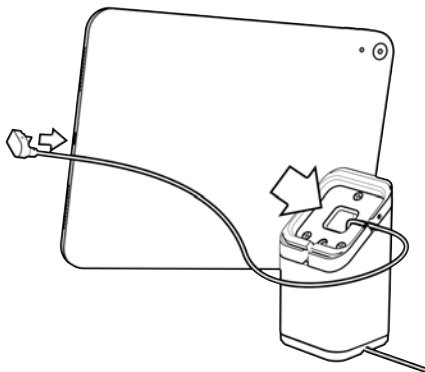

5

Push the cable into the S-slot on the underside of the base, making sure to maintain the correct excess at the top.

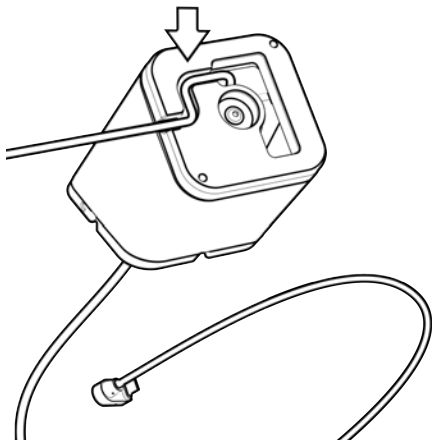

ASSEMBLY

6

Use either the Base Adhesive or 2 wood screws to secure the stand to the desired mounting surface.




or



7

The tablet can be mounted portrait or landscape. Remove the film from one side of the Tablet adhesive and attach to the Tablet Connector Plate with the pull tabs hanging off.

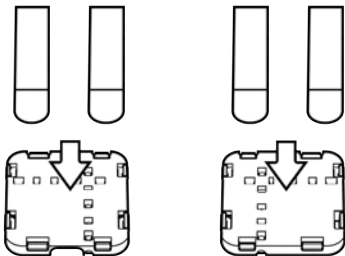


Portrait

Landscape


ASSEMBLY

7

Remove the film from the other side of the adhesive and place in the center of the tablet with the cable channel facing the tablet charge port.

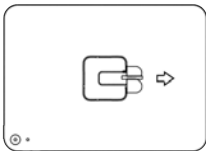


Portrait

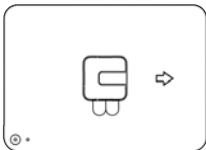

Landscape

8


Plug the cable into the tablet, then place the tablet onto the stand, maneuvering the cable into the channel

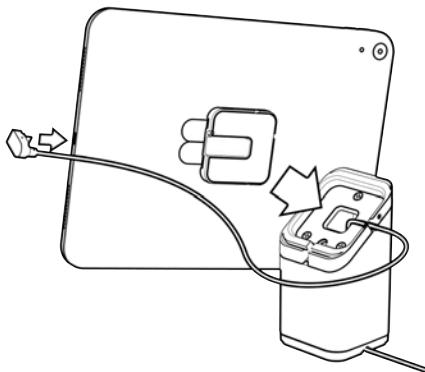

ASSEMBLY

9

To lock the tablet to the stand, push the locking pin through the hole in the top of the stand. The pin can be removed using a thin pin or paperclip.

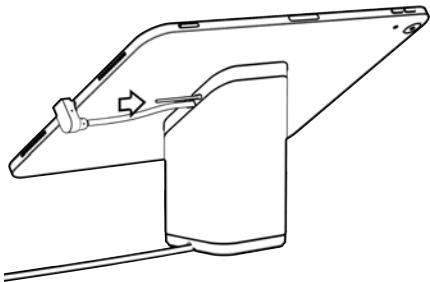

Assembly Complete

WARNINGS

Read all Warnings Before Use

- Do not expose electrical components to fire, extreme heat or cold, moisture, liquid, extreme low air pressure, punctures, or overtly hazardous environments.
- This product is intended for those 14+ years old. Keep away from children.
- Do not attempt to modify or repair device.
- This device contains Neodymium magnets. Magnets can affect or damage pacemakers, credit and debit cards, data storage media, mechanical watches, laptops, and TV's. Keep away from objects that could be affected.
- Ignoring these warnings can result in potential property damage or personal injury.

COMPLIANCE

This product complies with all applicable requirements for the Federal Communications Commission, European Conformity, Waste Electronic and Electrical Equipment, and Restriction of Hazardous Substances.

Batteries, electronic, and electrical equipment should not be disposed of with household waste. Wherever possible, they should be segregated and brought to an appropriate collection point to enable recycling and avoid potential impacts on the environment and human health. For more information, contact your local authorities.

