



AMS1 CARTRIDGE

AMS1

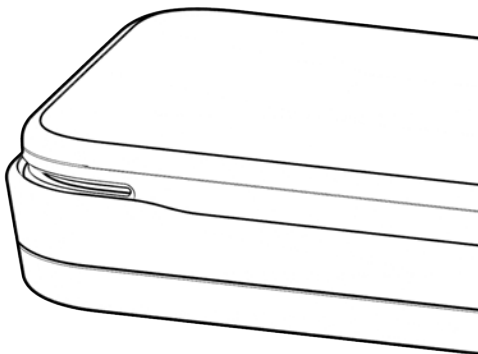

Rev A

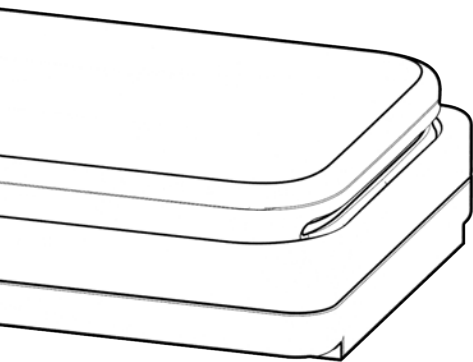

CNX2-AMS1

CONTENTS

What's Included	1
Assembly	3
Disassembly	9

WHAT'S INCLUDED

D:1




Cartridge
(1)

ASSEMBLY

1


Slide the NOCC plate (E) to the side to remove it from the Core (B).

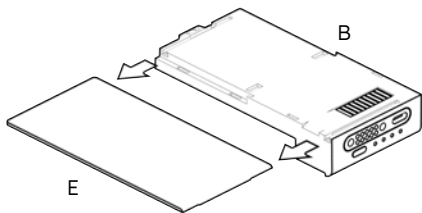

ASSEMBLY


2

Slide the feet of the Cartridge (D:1) into the slots on the Core (B) until it clicks.

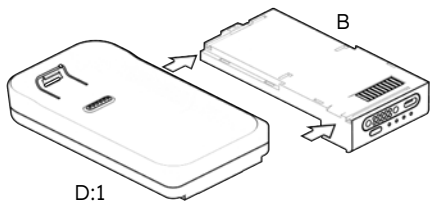

3

Insert the Swipe Slot of the Reader into the Cartridge. Press the other end down until it clicks.

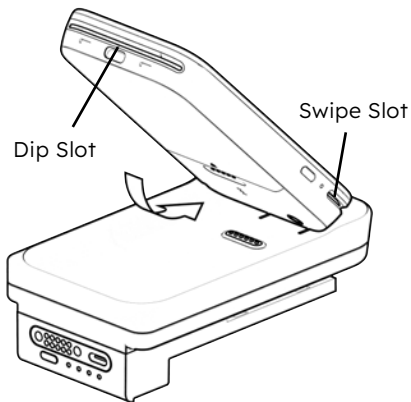

ASSEMBLY

Attention

To continue the assembly process,
please refer to the Get Started
instruction booklet.

Attention

DISASSEMBLY

Attention


Please refer to the Get Started instruction booklet to begin disassembly.

Attention

DISASSEMBLY


1

Press down on the front lever until it clicks. Pull the Card Reader up to remove.

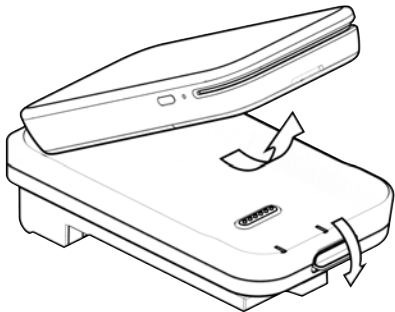

2

Slide the feet of the Cartridge (D:1) out of the slots on the Core (B) to release.

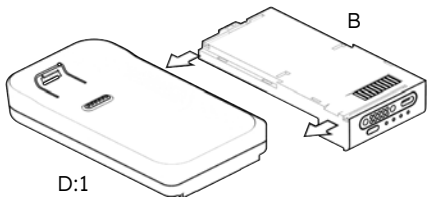

Disassembly Complete

