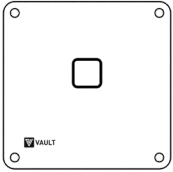
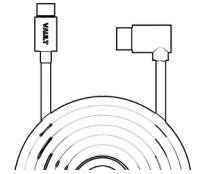
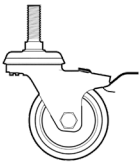
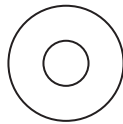



Pro Kiosk

Items Included


Base
(1)Bottom Segment
(1)6 in. Extension
(1)Top Segment
(1)10FT USB-C Cable
(1)Allen Key
(1)Set Screws
(12)Rubber Feet
(4)Mounting Screws
(4)

Optional Accessories


Stainless Castors
(4)Nylon Washers
(4)Acorn Nuts
(4)

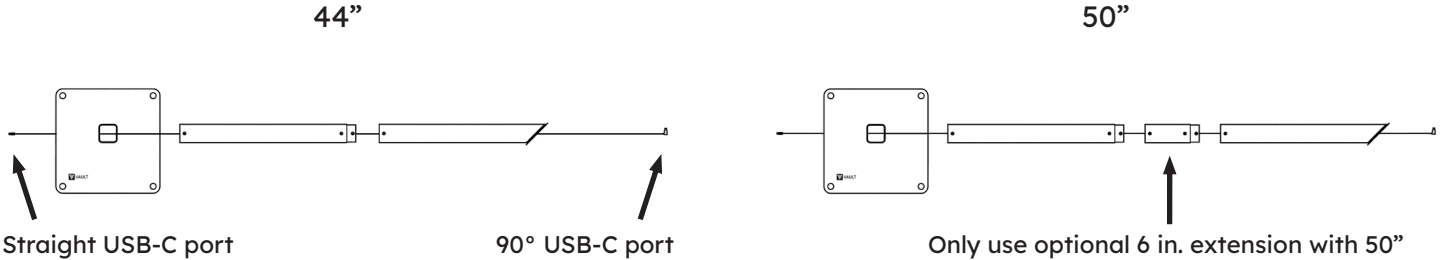Pro Kiosk Assembly**Step 1**

Feed the included 10ft cable through the desired kiosk segments.

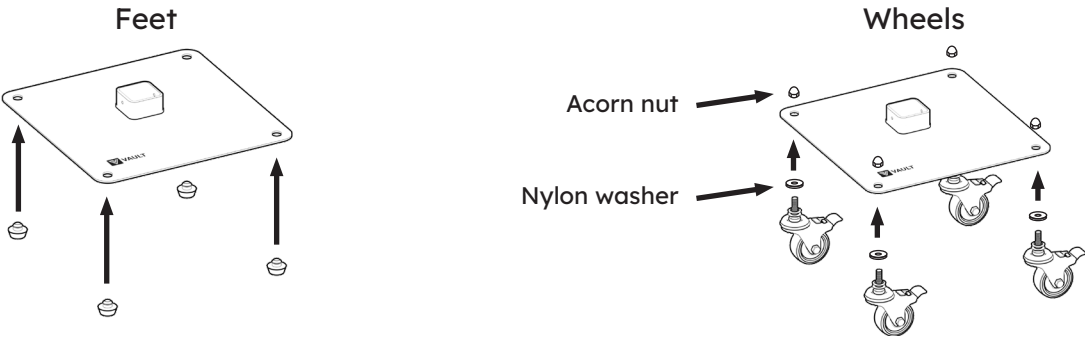Step 2

Install the included feet or optional wheels (purchased separately).

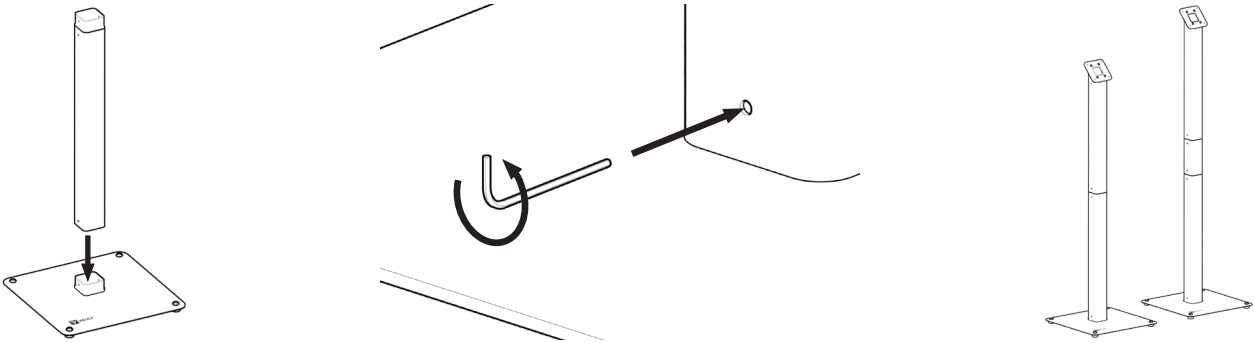Step 3

Install the segments to reach your desired kiosk height. Turn counter-clockwise to tighten.