



Scan the QR code to verify that you have the latest instructions or visit vaultenclosures.com/instructions



PARTS INCLUDED

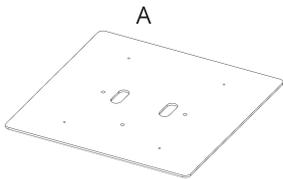

A
Stabilization Base
(1)



B
M10 Spacer
(3)




C
M10 Socket Head Screw
(3)




D
Foam Feet
(4)

PREASSEMBLY


*Apply the (4) Foam Feet to the bottom of the Stabilization Base as shown.

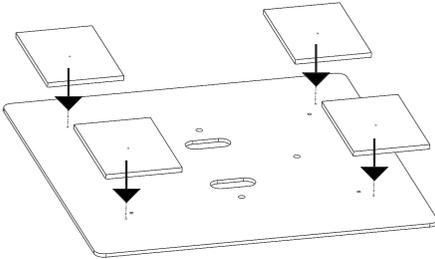



*Remove the current Kiosk feet from the bottom of the Kiosk as shown.

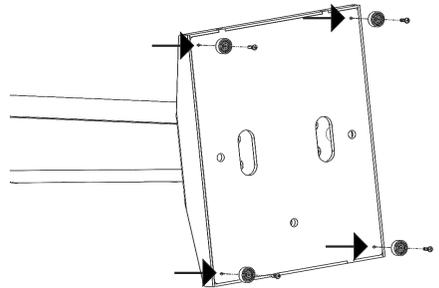


1. Remove the rubber plugs from the Kiosk as shown.

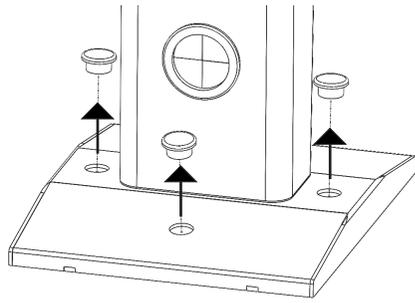

2. Place the Kiosk onto the Stabilization Base so that the holes line up as shown.

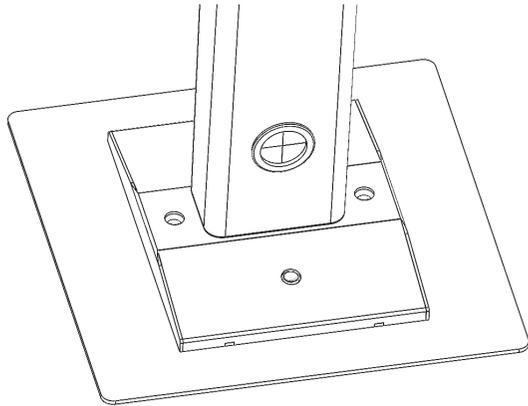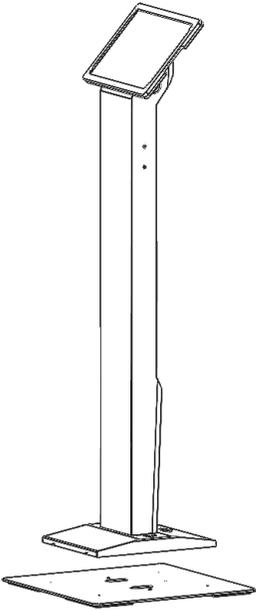

3. Screw the Kiosk to the Stabilization Base using the (3) M10 Socket Head screws and M10 Spacers provided.

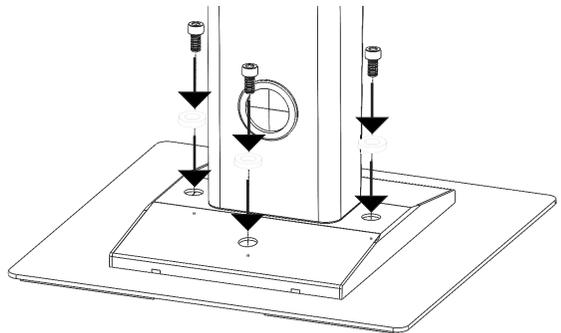

REFER TO TABLET ENCLOSURE INSTRUCTIONS
TO FINISH YOUR SOLUTIONS ASSEMBLY

