



GoWork Pro iPhone 16e Case


Items Included

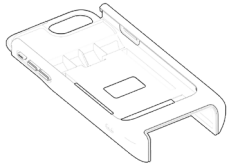

Case Body
(1)




Case Cap
(1)

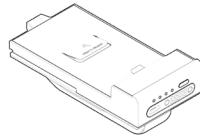

Core
(1)



Security Screw
(1)

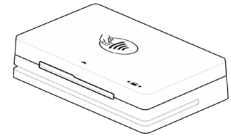


Payment Adapter
(Optional)

Before You Start

Fully charge the core before use. If you purchased a Payment Adapter use those instructions first.


Assembly

Step 1

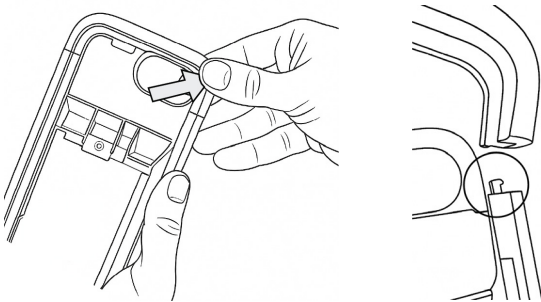

Remove cap from case by pulling corner to separate from clip. This will be tough and it is okay to pry off hard.


Step 2

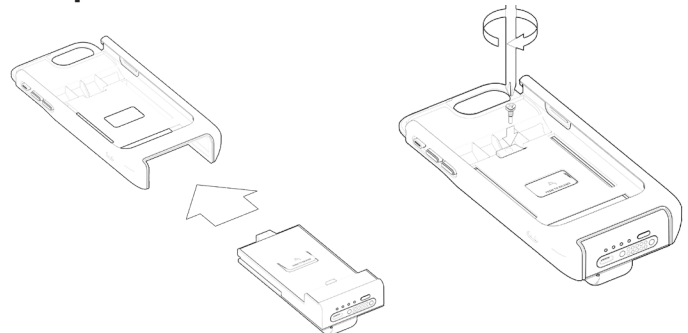

Insert the core + Payment Adapter (Optional) into the Case Body.


Recommended to secure the core to the Case Body with the Core Screw. Screw is stored within case.

Step 3

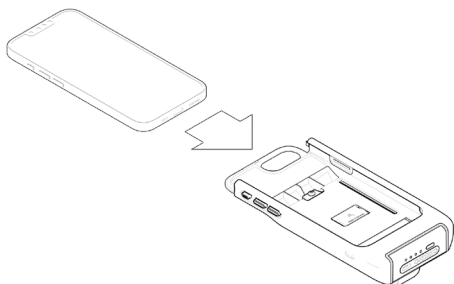


Slide the Phone into the Case Body so that the Core USB-C plug fully seats into the phone.


Step 4

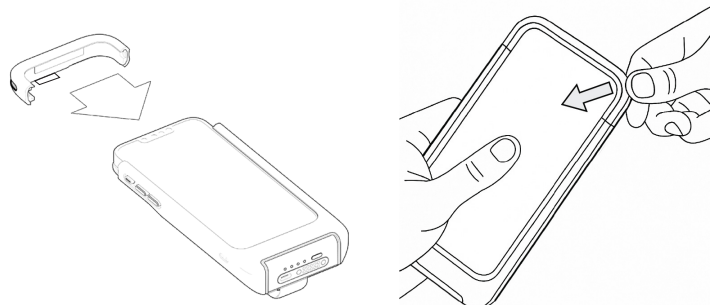


Slide the Case Cap onto the Phone to complete the installation. Give corners a hard push to securely click into place.

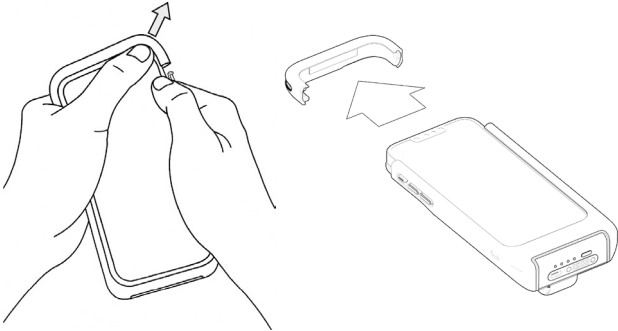Disassembly**Step 1**


Push the corner upward on the Case Cap via the corner until it releases from the Case Body. This will be tough and won't break the cap if using force.

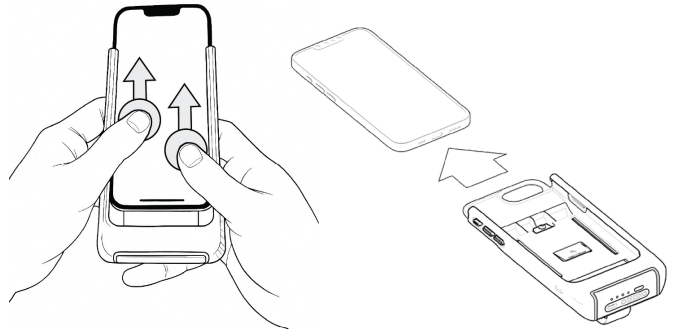Step 2

Slide the Phone out of the Case Body by pressing up with two fingers as shown applying some force.

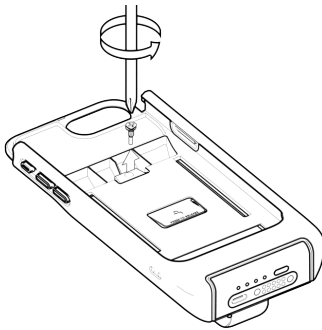Step 3

Remove the optional Core Screw if installed.

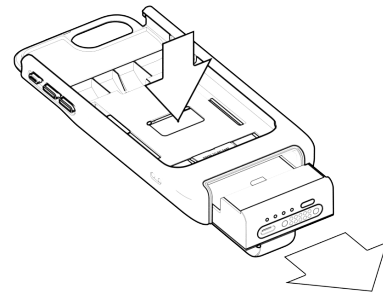Step 4

Depress the release button while pulling on the Core to remove it from the Case Body.