

GoWork Pro Sunshade

Items Included




Sunshade
(1)



Shoulder Strap
(1)

Assembly

Step 1

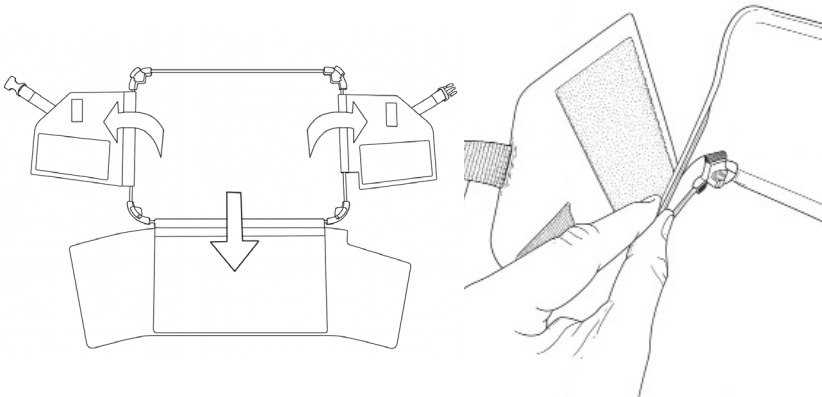


Open flaps out and connect Velcro ends on the fabric material to form sunshade structure.

Step 2




Connect the shoulder strap to the left and right end buckles on the flaps.

Step 3

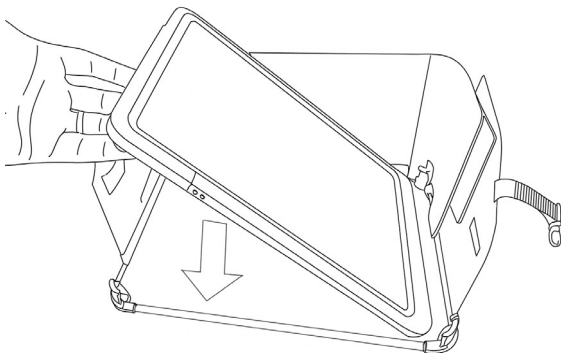

Insert the GoWork Pro case into the structural frame. The handle on the case can be left or right handed depending on use case.

Step 4

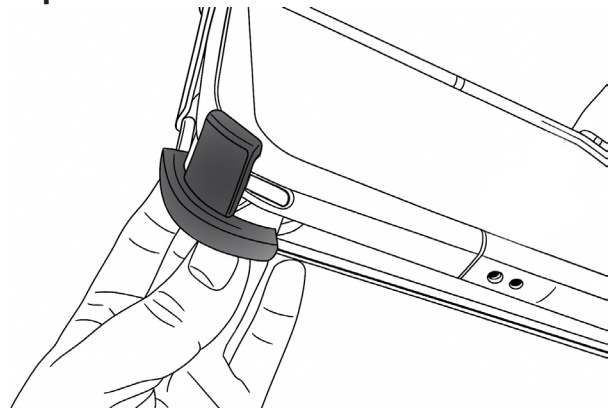

The GoWork Pro Case should click into the corner clips to be secured into the frame.