



# PIONEER SQUARE BRANDS


## GoWork Cases

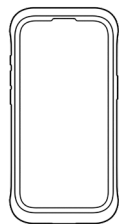

iPhone 15

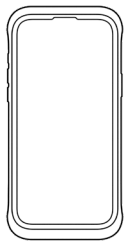


iPhone 15 Plus

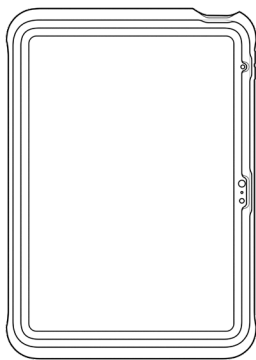


iPad 10th Gen


## Items Included

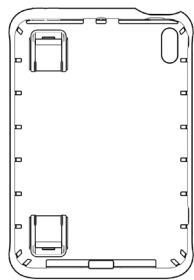


Case Body

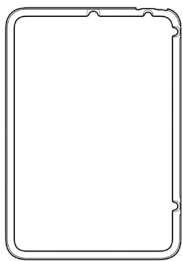

Bezel

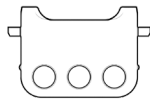


GoWork Cable Free  
Adaptor

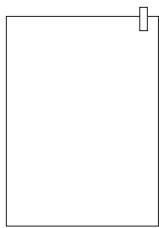

Overlay

## Optional Accessories

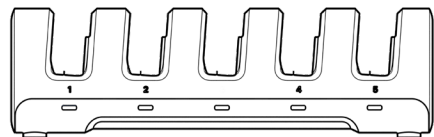


GoWork Power5 Charging Station

# PIONEER SQUARE BRANDS


## GoWork Case Assembly

### Step 1

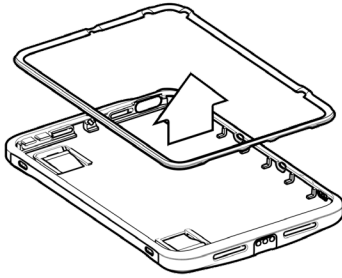


Remove the Bezel from the Case Body

### Step 2

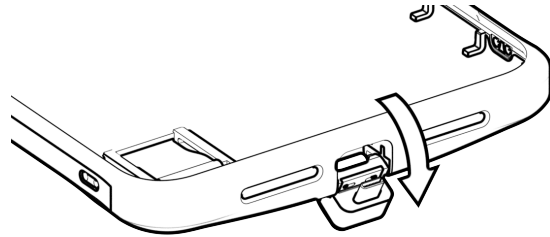


Slide and rotate the Adapter from the case

### Step 3

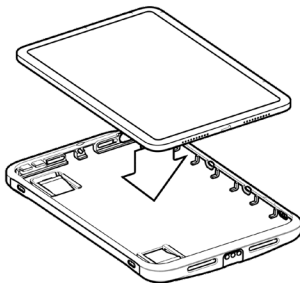


Insert the Device into the Case

### Step 4

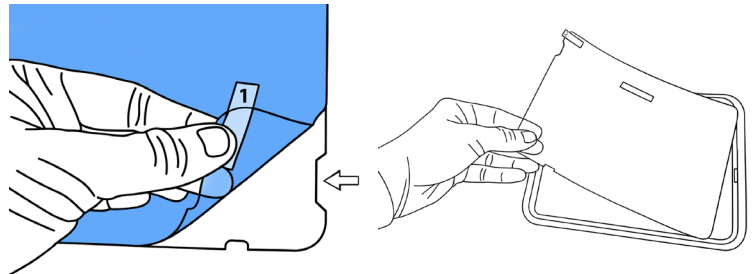


To add overlay, remove side labeled **1 - back** and place into case with cutout lined up on button side.

### Step 5

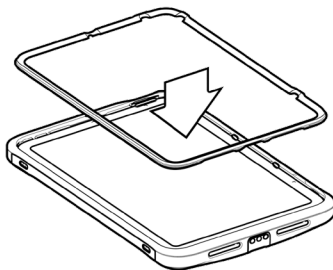

Install the Bezel on top of the device

### Step 6

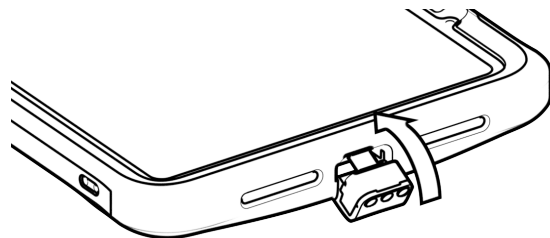

Plug the adapter into the device